

330500 Velomitor Piezo-velocity Sensor

Datasheet

Bently Nevada Machinery Condition Monitoring

141632 Rev. R



Description

Bently Nevada Velomitor Piezo-velocity Sensors are designed to measure absolute (relative to free space) bearing housing, casing, or structural vibration. The 330500 is a specialized piezoelectric accelerometer that incorporates embedded integrated electronics in a solid-state design.

Because the 330500 incorporates solid-state electronics and has no moving parts, it does not suffer from mechanical degradation and wear, and can be mounted vertically, horizontally, or at any other angle of orientation





Most common machine malfunctions (unbalance, misalignment, etc.) occur on the rotor and originate as an increase (or at least a change) in rotor vibration. For any individual casing measurement to be effective for overall machine protection, the system must continually transmit a significant amount of rotor vibration to the machine casing, or mounting location of the transducer.

In addition, be careful to install the accelerometer transducer on the bearing housing or machine casing. Improper installation may decrease the transducer amplitude and frequency response and/or generate false signals that do not represent actual vibration. Refer to the appropriate instruction manuals and Application Notes.

Upon request, Bently Nevada provides engineering services that can identify the appropriate machine



 housing measurements and installation assistance if needed.

 If you integrate the 330500 Velomitor output to measure displacement, electrical noise from interference and the transducer circuit can be amplified. The noise can degrade performance of 330500 transducers and produce inaccurate displacement data.

Specifications

Parameters are specified from +20 °C to +30 °C (+68 °F to +86 °F) and at 100 Hz unless otherwise indicated.



Operating the transducer outside the specified limits may result in false readings or loss of machine monitoring.

Electrical

Sensitivity	3.94mV/mm/s (100 mV/in/s) ±5%.
Frequency Response	4.5 Hz to 5 kHz (270 cpm to 300 kcpm) ±3.0 dB. 6.0 Hz to 2.5 kHz (360 cpm to 150 kcpm) ±0.9 dB.
Temperature Sensitivity	-14% to +7.5% typical over the operating temperature range.
Velocity Range	1270 mm/s (50 in/s) peak.
Transverse Sensitivity	Less than 5% of sensitivity.
Amplitude Linearity	±2% to 152 mm/s (6 in/s) peak.
Mounted Resonant Frequency	Greater than 12 kHz.
Output Bias Voltage	-12 ±3.0 V _{DC} , over temperature referenced to Pin A.
Dynamic Output Impedance	Less than 2400 Ω
Broadband Noise Floor (4.5 Hz to 5 kHz)	0.004 mm/s (160 μin/s) rms, nominal
Grounding	Case isolated

Maximum Cable Length	305 metres (1,000 feet) of cable, part number 02173006, with no degradation of signal.
----------------------	--

Environmental Limits

Operating Temperature Range	-55°C to 121°C (-67°F to 250°F)
Shock Survivability	5,000 g peak, maximum
Relative Humidity	To 100% non-submerged; case is hermetically-sealed.
Base Strain Sensitivity	0.005 in/s/mstrain.
Magnetic Field Susceptibility	<51 min/s/gauss (50 gauss, 50-60Hz).

Physical

Weight	142 grams (5.0 oz), typical.
Diameter	25.3 mm (0.995 in).
Height	63.2 mm (2.49 in).
Case Material	316L stainless steel.
Connector	2-pin Mil-C-5015 hermetically-sealed, 316L stainless steel shell.
Mounting Torque	32-46 kg cm (24-40 in-lb) max.
Polarity	When the sensor case motion is toward the connector, Pin A becomes positive with respect to pin B.
Recommended cable length (assuming max vibration of 50g, frequency 10 kHz, and cable capacitance 200 pf/m.) For longer lengths, contact Bently Nevada Tech Support.)	208 ft (63m)

Compliance and Certifications

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

EMC

EMC Directive 2014/30/EU

RoHS

RoHS Directive 2011/65/EU

Maritime

DNV rules for classification – Ships

DNV rules for classification – High
speed and light craft

DNV offshore standards

Hazardous Area Approvals



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.





CSA/NRTL/C

190501 (Agency Approval Options 01 through 04)	
Intrinsically Safe	<p>Ex ia IIC T4: Class I, Div 1, Groups A, B, C, D. Class II, Group E, F and G Class III</p> <p>AEx ia IIC T4: Class I, Div 1, Groups A, B, C, D; Class II, Groups E, F, G Class III</p> <p>Install per drawing 167536</p> <p>T4 @ -40°C ≤ Ta ≤ +100°C (-40°F ≤ Ta ≤ +212°F)</p>
Intrinsically Safe and Non-Incendive	<p>Ex nL IIC T4 Class I, Division 2, Groups A, B, C and D</p> <p>AEx nA T4 Class I, Division 2, Groups A, B, C and D</p> <p>Install per drawing 167536</p> <p>T4 @ -40°C ≤ Ta ≤ +100°C (-40°F ≤ Ta ≤ +212°F)</p>
330400, 330425	<p>Ex ia IIC T4 AEx ia IIC T4 Class I, Div 1 Groups A, B, C and D Class II, Groups E, F, and G Class III</p> <p>T4 @ -40°C ≤ Ta ≤ 100°C Install per dwg 167538</p>
330500	<p>Ex ia IIC T4 AEx ia IIC T4 Class I, Division 1, Groups A, B, C and D Class II, Groups E, F, G Class III</p> <p>Install per dwg 167537 T4 @ -40°C ≤ Ta ≤ 100°C</p> <p>Ex nL IIC T4 AEx nA IIC T4 Class I, Div 2, Groups A, B, C, D</p> <p>Install per dwg 167537 T4 @ -40°C ≤ Ta ≤ 100°C</p>

330525	<p>Ex ia IIC T4 AEx ia IIC T4 Class I, Division 1, Groups A, B, C and D Class II, Groups E, F, G Class III</p> <p>T4 @ -40°C ≤ Ta ≤ 100°C</p> <p>Ex nL IIC T4 AEx nA IIC T4 Class I, Div 2, Groups A, B, C, D</p> <p>Install per dwg 167539 T4 @ -40°C ≤ Ta ≤ 100°C</p>
---------------	--

ATEX/IECEX

190501, 330400, 330425, 330500, 330525

<p>190501</p> <p>Entity Parameters</p>	<div style="text-align: center;">  </div> <p>II 1 G Ex ia IIC T4 Ga</p> <div style="text-align: center;">  </div> <p>II 3 D Ex na IIC T4 Gc Ex tc IIIC T130°C Dc T4@ Ta = -55°C to 121°C</p> <table border="1" data-bbox="386 638 743 936"> <thead> <tr> <th>Zone 0/1</th> <th>Zone 2</th> </tr> </thead> <tbody> <tr> <td>Ui= 30V</td> <td>Ui= 30V</td> </tr> <tr> <td>Ii= 200mA</td> <td>Ii= 200mA</td> </tr> <tr> <td>Pi= 0.75W</td> <td>Pi= 1.14W</td> </tr> <tr> <td>Ci=27.2nF</td> <td></td> </tr> <tr> <td>Li= 0</td> <td></td> </tr> </tbody> </table>	Zone 0/1	Zone 2	Ui= 30V	Ui= 30V	Ii= 200mA	Ii= 200mA	Pi= 0.75W	Pi= 1.14W	Ci=27.2nF		Li= 0	
Zone 0/1	Zone 2												
Ui= 30V	Ui= 30V												
Ii= 200mA	Ii= 200mA												
Pi= 0.75W	Pi= 1.14W												
Ci=27.2nF													
Li= 0													
<p>330400, 330425, 330500, 330525</p> <p>Entity Parameters</p>	<div style="text-align: center;">  </div> <p>II 1 G Ex ia IIC T4 Ga</p> <div style="text-align: center;">  </div> <p>II 3 D Ex na IIC T4 Gc Ex tc IIIC T130°C Dc T4@ Ta = -55°C to 121°C</p> <table border="1" data-bbox="386 1260 743 1558"> <thead> <tr> <th>Zone 0/1</th> <th>Zone 2</th> </tr> </thead> <tbody> <tr> <td>Ui= 28V</td> <td>Ui= 28V</td> </tr> <tr> <td>Ii= 150mA</td> <td>Ii= 150mA</td> </tr> <tr> <td>Pi= 0.84W</td> <td>Pi= 1.26W</td> </tr> <tr> <td>Ci=10.8nF</td> <td></td> </tr> <tr> <td>Li= 0</td> <td></td> </tr> </tbody> </table>	Zone 0/1	Zone 2	Ui= 28V	Ui= 28V	Ii= 150mA	Ii= 150mA	Pi= 0.84W	Pi= 1.26W	Ci=10.8nF		Li= 0	
Zone 0/1	Zone 2												
Ui= 28V	Ui= 28V												
Ii= 150mA	Ii= 150mA												
Pi= 0.84W	Pi= 1.26W												
Ci=10.8nF													
Li= 0													

Hazardous Area Conditions of Safe Use

ATEX/IECEX

Zone 0/1:

Equipment must be connected to equipment, which meets the abovelisted entity parameters.

The cables type A or B (in compliance with EN 60079-25) must respect the cable parameters listed with the entity parameters.

Zone 2 :

The supply electrical parameters shall not exceed the values mentioned in the tables above.

Ordering Information



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from Bently.com.

Velomitor Piezo-velocity Sensor 330500-AA-BB

A: Mounting Thread Adaptor Option

00	No adapter
01	1/2 - 20 UNF
02	M8 x1
03	1/4 - 28 UNF
04	1/4 - 20 UNC
05	Unavailable for 330500.

Note: For 1/4-18 NPT mounting, order 330525.

06	5/8 - 18 UNF
07	3/8 - 16 UNC
08	1/2 - 13 UNC

B: Agency Approval Option

00	Not required
01	CSA/US/C
02	ATEX (European)
04	Multiple approvals (CSA, ATEX)

Interconnection Cables

Standard Cable Lengths

Feet	Meters (approximate)
6 ft	1.8 m
8 ft	2.4 m

Feet	Meters (approximate)
10 ft	3.0 m
12 ft	3.6 m
15 ft	4.5 m
17 ft	5.0 m
20 ft	6.0 m
25 ft	7.6 m
30 ft	9.0 m
33 ft	10.0 m
50 ft	15.2 m
99 ft	30.0 m

Custom Cable Part Numbers

You can order custom cable lengths in increments of 1.0 ft (305 mm) at additional cost. Some cables have a minimum and maximum length.



Use 'NN' in these part numbers to specify the length (in feet) of the cable you want to order.

Part Number	Description
9571-NN	Two-conductor twisted, shielded 22 AWG cable with two-socket moisture-resistant female connector at one end, terminal lugs at the other end. Used with monitors. Not for use with 21128 Velocity Transducer Housing. Min. length: 2.0 ft (0.6 m) Max. length: 99 ft (30 m)

Part Number	Description
84661-NN	Two-conductor twisted, shielded 22 AWG armored cable with two-socket moisture-resistant female connector at one end, terminal lugs at the other end. Used with monitors. Not for use with 21128 Velocity Transducer Housing. Min. length: 3.0 ft (0.9 m) Max. length: 96 ft (29 m)
89477-NN	Two-conductor 18 AWG twisted, shielded cable with right angle two-socket plug at one end, terminal lugs at the other end. Used with monitors and with 21128 Velocity Transducer Housing. Min. length: 2.0 ft (0.6 m) Max. length: 99 ft (30 m)
125065-NN	Two-conductor 18 AWG twisted, shielded cable with two-socket plug and fluorosilicone elastomer boot at one end, terminal lugs at the other. Used with monitors. Not for use with 21128 Velocity Transducer Housing. Min. length: 2.0 ft (0.6 m) Max. length: 99 ft (30 m)

Velocity Transducer Housing Assembly

21128-AA-BB

A: Mounting Thread Option

01	Unthreaded
02	3/4 - 14 NPT
03	1/2 - 14 NPT
04	1/2 - 12 BSP

B: Cable Exit Fitting Option

01	1/2 - 14 NPT plug
02	1/2 -14 NPT explosion-proof
03	1/2 -14 NPT explosion-proof with cable gland seal



When using the 21128 Housing, cable part number 89477-AA is necessary to connect the Velomitor Sensor to a monitor.

Velocity Transducer Housing – CENELEC approved

107770-AA-BB

This version is a combination of the 330500 Velomitor Sensor and a 21128 Housing pre-installed at the factory. It is also rated for CENELEC Zone 1, Group IIC hazardous area applications.

A: Mounting Thread Option

01	Unthreaded
02	3/4 - 14 NPT
03	1/2 - 14 NPT
04	1/2 - 14 BSP

B: Cable Exit Fitting Option

01	1/2 - 14 NPT plug
-----------	-------------------


02	1/2 - 14 NPT explosion-proof
03	1/2 - 14 NPT explosion-proof with cable gland seal

Accessories

Part number	Description
100076	330500 Velomitor Sensor and Velomitor XA Sensor User Guide
02173006	Bulk cable; 2 conductor 18 AWG twisted, shielded cable without connectors or terminal lugs. Specify number of feet.
46000-01	Magnetic Base for temporary mounting of Velomitor Sensors. Used with 1/4 - 28 UNF mounting thread adapters.
46122-01	Quick Connect for semi-permanent mounting of Velomitor Sensors. Used with 1/2 - 20 UNF mounting thread adapters.
89409-01	Individual 1/2 - 20 UNF mounting adapter.
89410-01	Individual M8 x 1 mounting adapter.
89411-01	Individual 1/4 - 28 UNF mounting adapter.
89412-01	Individual 1/4 - 20 UNC mounting adapter.
89413-01	Individual 1/4 - 18 NPT mounting adapter. Spares only. For new installations, order 330525 velometer.
04300015	Individual 5/8 - 18 UNF mounting adapter.

Part number	Description
161191	Individual 1/2 - 13 UNC mounting adapter. The Velomitor Sensor is shipped with an adapter. Individual adapters are available as spares.
123135-01	Velomitor Sensor Power Module.

Graphs and Figures

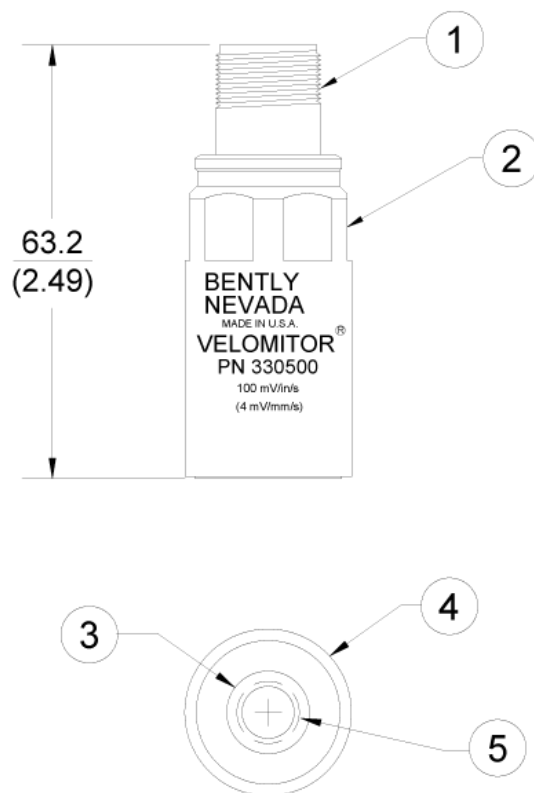

1. 2-pin, MIL-C-5015 receptacle
2. 15/16 inch hexagonal
3. 12.7 (0.500) diameter, 0.8 (0.030) deep counterbore
4. 25.3 (0.995) diameter
5. 3/8-24 UNF-2B, 6.4 (0.250) minimum threaded depth, 14.0 (0.550) maximum drill depth

Figure 1: Velomitor Piezo-Velocity Sensor Dimensional Drawing

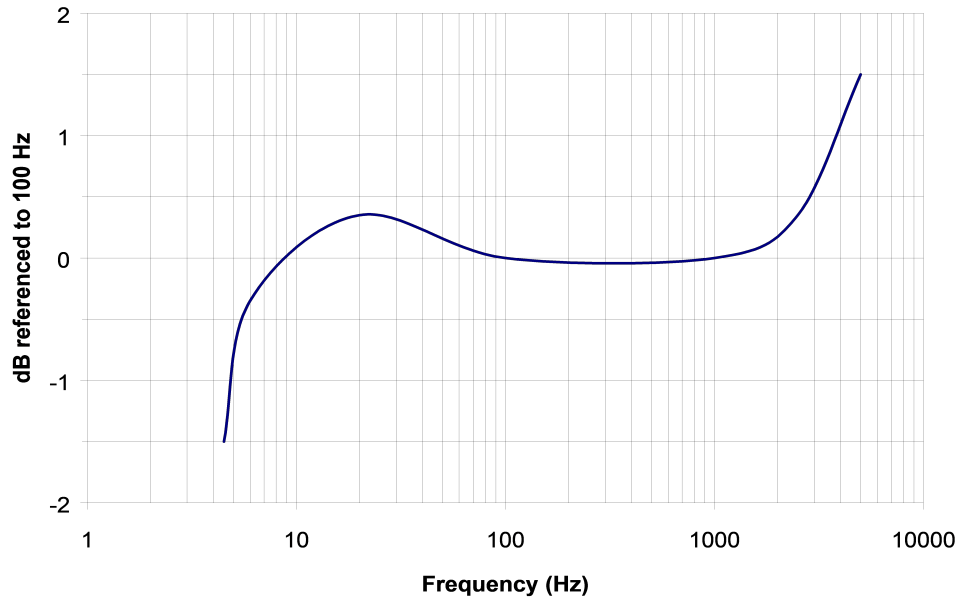


Figure 2: Typical Amplitude Response

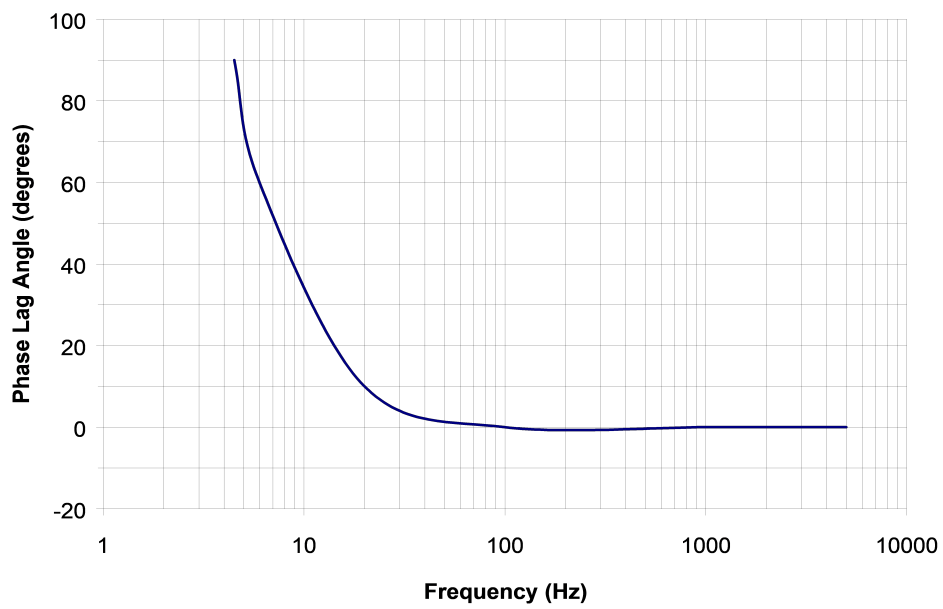


Figure 3: Typical Phase Response

Copyright 2022 Baker Hughes Company. All rights reserved.



Bently Nevada, Velomitor and Orbit Logo are registered trademarks of Bently Nevada, a Baker Hughes business, in the United States and other countries. The Baker Hughes logo is a trademark of Baker Hughes Company. All other product and company names are trademarks of their respective holders. Use of the trademarks does not imply any affiliation with or endorsement by the respective holders.

Baker Hughes provides this information on an "as is" basis for general information purposes. Baker Hughes does not make any representation as to the accuracy or completeness of the information and makes no warranties of any kind, specific, implied or oral, to the fullest extent permissible by law, including those of merchantability and fitness for a particular purpose or use. Baker Hughes hereby disclaims any and all liability for any direct, indirect, consequential or special damages, claims for lost profits, or third party claims arising from the use of the information, whether a claim is asserted in contract, tort, or otherwise. Baker Hughes reserves the right to make changes in specifications and features shown herein, or discontinue the product described at any time without notice or obligation. Contact your Baker Hughes representative for the most current information.

The information contained in this document is the property of Baker Hughes and its affiliates; and is subject to change without prior notice. It is being supplied as a service to our customers and may not be altered or its content repackaged without the express written consent of Baker Hughes. This product or associated products may be covered by one or more patents. See [Bentley.com/legal](https://www.bentley.com/legal).

1631 Bently Parkway South, Minden, Nevada USA 89423
Phone: 1.775.782.3611 (US) or [Bentley.com/support](https://www.bentley.com/support)
[Bentley.com](https://www.bentley.com)